

# 120 Litre, 12v Fertilizer Spreader Assembly Guide





Attach hopper to frame as shown



Ensure plastic grate is attached inside hopper when mounting.



Green flaps (left and right) are adjustable. Use wing nuts to tighten.



Ensure spring is attached to longer fertiliser gate tab as shown.



Attach control cable to shorter fertiliser gate tab as shown.



Attach control cable mount to welded tab on spreader frame as shown.



Controller includes bolts and bracket for attachment to tow vehicle.



DC motor speed controller, controls speed of spinner.

If motor does not start, check the polarity to the battery.