


# PTO Friction Clutch

Friction clutches are typical torque limiting devices that use friction as a means to limit the amount of torque that can be delivered to your implement. These clutches use one of two types of springs, pigtail or flat (belleville). Historically, a friction clutch is a simple, reliable method of protecting equipment. But be warned. The torque setting of any "friction" device changes as the discs and related parts wear.

Factory settings are only good at the factory. PTO Clutches are excellent for mowers, slashers, post hole borers, rotary cultivators, rotary cutters, combine headers, grain carts, tillers, trenchers, balers, fans, forage harvesters, etc.

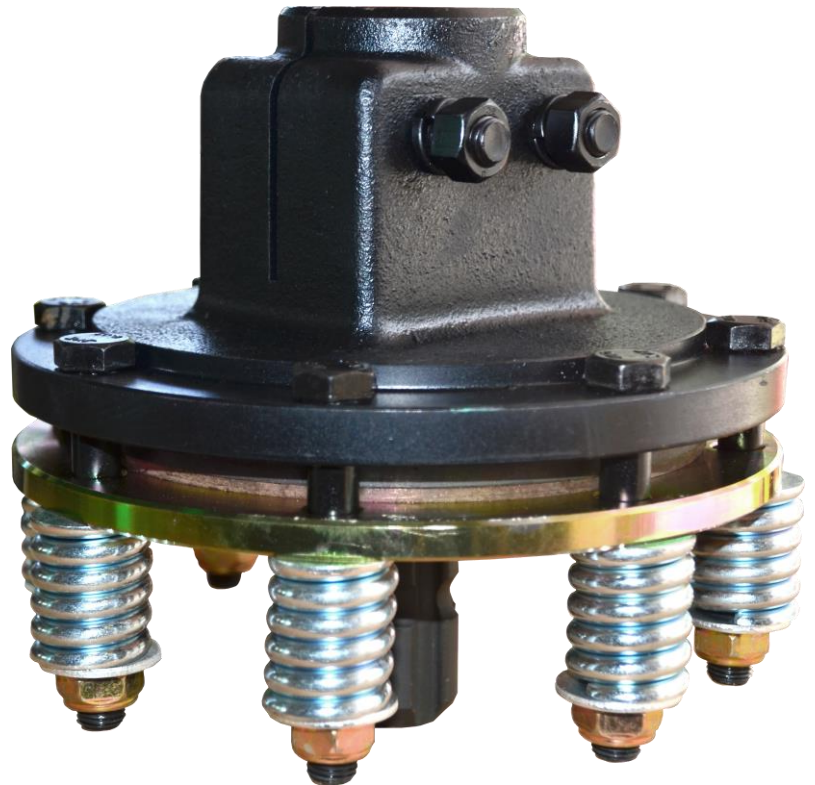

Hitch	PTO
Construction	Steel
Tractor Power Required	Up to 60HP
PTO Speed	540 RPM
Spline Type	F35 Square, 6 teeth
Spline (Female)	1 3/8" (35mm)
Spline (Male)	1 3/8" (35mm)
Plate Diameter	6 inches (165mm) or 8 inches (200mm)
Maximum Torque	1,000 Nm

\$

## Your Price

Inc. GST



- Chat to Normal, Friendly Folk
- 100% Australian Family Owned
- Factory Direct Products
- Readily Available Spare Parts
- Reliable After Sales Service

[www.DiscountImplements.com](http://www.DiscountImplements.com)

**(02) 6553 6393**

**The Lakes Way, Rainbow Flat, NSW 2430**

Discount Implements is a subsidiary of Discount Rural. Full specifications are available on our website. All prices are inclusive of GST. Warranty is strictly back-to-base. For full terms and conditions for the warranty, please visit our warranty page. \*Offers, inclusions and accessories are available only while stocks last and are subject to availability. Offers and/or included accessories may be withdrawn or changed without prior notice. Included bonuses may be changed for an alternative of lesser retail value at agents discretion. Package deal price(s) available only at designated marketing events or at dealers discretion. Prices and specifications correct at time of publication but are subject to change and/or correction without prior notice. Implements with gearboxes (ie. Connect to the tractor with a PTO shaft) do not contain oil when new - add gear oil before use. Some assembly is required. Gear oil not included. For our full Warranty Policy, please visit <https://www.discountimplements.com>